

DATA SHEET FW6Br2

Protectli Appliance Protectli Vault FW6Br2 6 Port - Intel® i3-8130U

June 28, 2024



Specifications

Model	FW6Br2		
Description	6X 1G Network Port Fanless Appliance		
Processor	Intel i3-8130U (64 Bit, 2.2 GHz, Turbo 3.4 GHz, 4MB Smart Cache)		
Processor Cores	2		
Processor Threads	4		
Intel AES-NI	Supported		
Virtualization	Intel Vt-x, Vt-d		
Network	6x Intel 1G Ethernet, RJ-45		
Video / Graphics	Intel UHD Graphics 620, 1x HDMI 1.4		
Audio	Audio over HDMI, 1x 3.5mm Audio Jack		
Memory	2x SO-DIMM DDR4-2400 1.2v, Dual Channel , Max 64GB		
Storage	1x mSATA		
Optional Storage	1x Internal 2.5" SATA 3.0 SSD		
External I/O	6x RJ-45 Ethernet		
	4x USB 3.2 Gen 2 Type A		
	1x HDMI		
	1x 3.5mm Audio Jack		
	2x WiFi/LTE Antenna Mounting Holes		
	1x 12V DC Power Jack		
Internal I/O	1x Mini PCIe for mSATA		
	1x SATA Header, 1x SATA Power		
	1x Half Height mPCIe (USB 3.2 Gen 2/PCIe 3.0) for WiFi		
	1x CMOS Reset (2 pin)		
	1x CPU Fan Header (4 pin)		
	1x Front Panel Header (9 pin)		
BIOS	AMI or coreboot		
Indicators	1x LED Power Button (Blue), 1x LED Power Indicator (Green), 1x LED Disk Activity Indicator (Red), 1x LED Disk Activity Indicator (Yellow)		
Power	Input 12V DC, 1x DC Power Jack		
	Max 45W		
Power Usage	Max 45W		



Chassis Dimensions	6.1 x 5 x 2 in, 155 x 127 x 50 mm		
Mounting Options	Desktop, VESA Bracket, Optional 1RU Rack Mount		
Weight	2 lbs 4 oz, 1.0 kg		
Shipping Weight	3 lbs 12 oz, 1.7 kg		
Operating Temperature	+14° - +122° F, -10° - +50° C		
Operating Humidity	0 – 95% relative humidity, non-condensing		
Approvals	UL (Power Supply), FCC Part 15 Class B, CE, RoHS		
Country of Origin	Made in China, Assembled in USA, Canada, or Germany		
Optional WiFi	1x Half Height mPCIe 802.11b/g/n (USB) or 802.11ac/a/b/g/n (PCIe)		



System Features

Front Features

	OPT3 OPT2 OPT1	LAN WAN	
1 2 3	4 5 6	7 8	9 10 11

ltem #	Object	Description
1	Power Supply Connector	12V DC barrel connector for the 60W external power supply. Positive rail is the tip, negative is sleeve.
2,9	Antenna Ports	Two antenna ports for adding radio antennas (WiFi, LTE, etc.). The ports are covered by plugs while not in use.
3	Ethernet Port 6	The sixth 10/100/1000 Mbps Intel® i211 ethernet port. This port is labeled "OPT4" for convenience, but is not limited in its capacity.
4	Ethernet Port 5	The fifth 10/100/1000 Mbps Intel® i211 ethernet port. This port is labeled "OPT3" for convenience, but is not limited in its capacity.



5	Ethernet Port 4	The fourth 10/100/1000 Mbps Intel® i211 ethernet port. This port is labeled "OPT2" for convenience, but is not limited in its capacity.
6	Ethernet Port 3	The third 10/100/1000 Mbps Intel® i211 ethernet port. This port is labeled "OPT1" for convenience, but is not limited in its capacity.
7	Ethernet Port 2	The second 10/100/1000 Mbps Intel® i211 ethernet port. This port is labeled "LAN" for convenience, but is not limited in its capacity.
8	Ethernet Port 1	The first 10/100/1000 Mbps Intel® i211 ethernet port. This port is labeled "WAN" for convenience, but is not limited in its capacity.
10	Power Indicator LED	This LED will stay solid green when the device is powered on.
11	HDD Activity LED	This red LED will light up when data activity is detected on either the mSATA or SATA interfaces.

Rear Features






ltem #	Object	Description	
1	Power Button	Pressing the Power Button will power the unit on and illuminate with a blue LED.	
		In OSes configured to handle ACPI signals, pressing the power button initiates a shutdown.	
		Pressing and holding the Power Button for 5 seconds will force the unit to power off.	
2	Reset Button (Recessed)	A momentary switch exposed via GPIO. <i>This is not an ACPI reset button, but a general purpose button that may be programmed in the guest OS</i> .	
3	HDMI Connector	Video and audio output via HDMI.	
4,6	USB3 Connectors	USB 3.2 Gen 2 Type-A connectors.	
5	Serial Console Port	RS232 serial communications via RJ-45. Default port settings: 115200 baud No parity 8 databits 1 stopbit	



Motherboard Top View

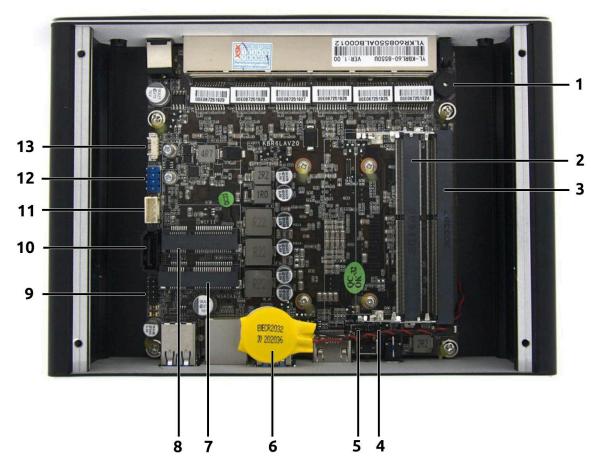

ltem #	Object	Label	Description
1	Buzzer	BUZZ1	PC Speaker
2	Memory Slot	SODIMM1	DDR4LP SODIMM.
3	Memory Slot	SODIMM2	DDR4LP SODIMM.
4	NVRAM Reset Jumper	JCMOS	Shorting this jumper while the CMOS battery is connected will reset the BIOS NVRAM.
5	Power Restore Jumper	AUTO_P	Jumper setting determines system state after power loss. Closing the jumper will cause the unit to

© 2024 Protectli. All Rights Reserved. https://protectli.com/product/fw6br2/



			automatically power on when power is restored after an outage.
6	CMOS Battery		3V CR2032 connected via 2-pin connector on the opposite side of the motherboard.
7	mSATA Connector	MSATA1	Connector for an mSATA storage device, such as an SSD.
8	WiFi Expansion Slot	WIFI1	Connector uses USB protocol over an mPCI connector. Designed for Protectli WiFI and LTE modems, but is not limited in its capabilities.
9	Front Panel Header	FP1	Internal header for adding external device controls and indicators featured through the front panel, such as power button, reset button, activity LEDs, etc.
10	SATA Data Connector	SATA1	SATA III data connector. Recommended for additional storage, such as a 2.5" SATA SSD.
11	SATA Power Connector	JSATA1	SATA power connector for additional storage.
12	USB 3.2 Header	FUSB1	Internal header for additional USB 3.2 Gen 2 connections.
13	Fan Header	CPU_FAN1	Four-pin PicoBlade-compatible header for optional PWM CPU fan.

Measurement View





Document History

2024-06-28

• Clarified PCI and USB specifications such as speed, protocol, etc.

2024-05-09

• Clarified LTE and/or WiFi slot naming schemes

2023-03-21

• Initial document.